




1. Hanger bracket installation.

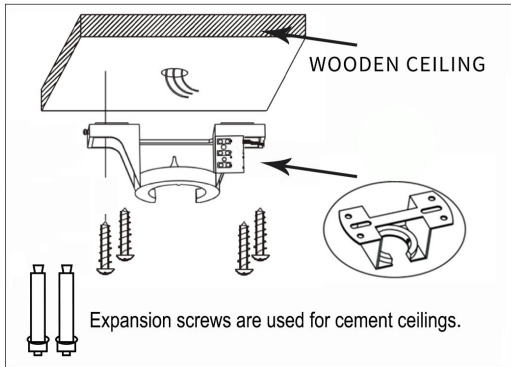


2. Installing drop rod and canopy.

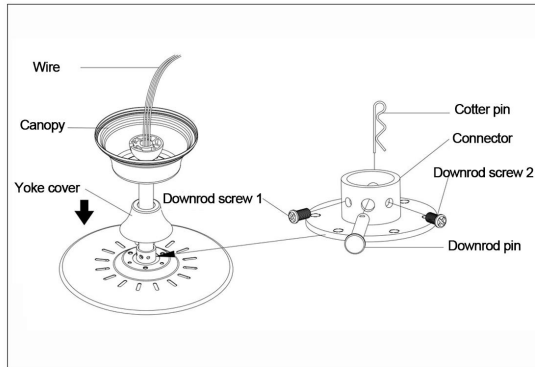


3. Hanging fan to bracket.

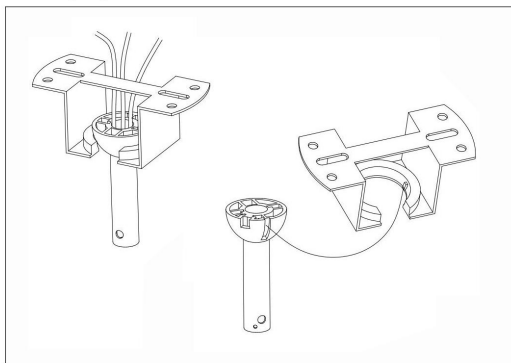

4. Attaching the blades.

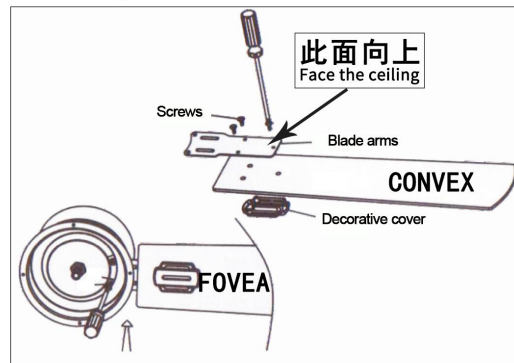


5. Installing light kit.(five lights)

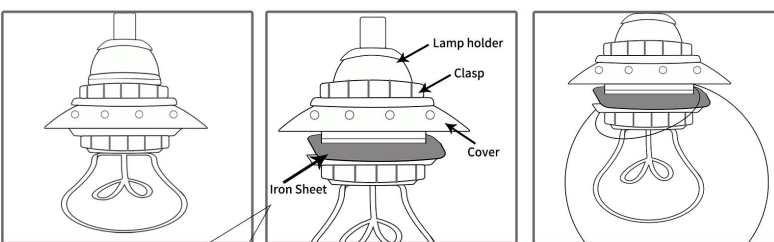


A. Install five light bulbs.
B. Unscrew the clasp. Open the first lampshade cover.
C. Exposing the second layer of Iron Sheet.
Angle the lampshade against the sheet iron so that the sheet iron is placed in the lampshade. Cover the first lampshade cover.

A. Install the three lampshades according to steps a-c of five lamps, place the lamp on the lamp disc, and tighten the fixed ball over.


6. Installing light kit.(three lights)

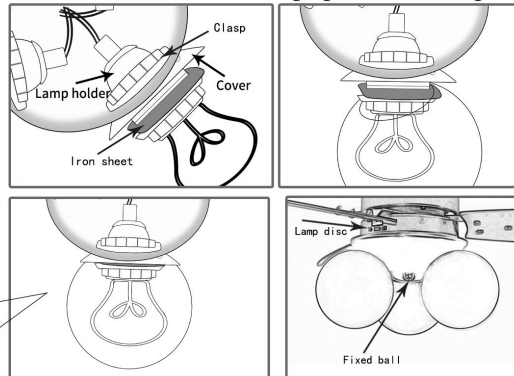

7. Installing light kit.(five lights)

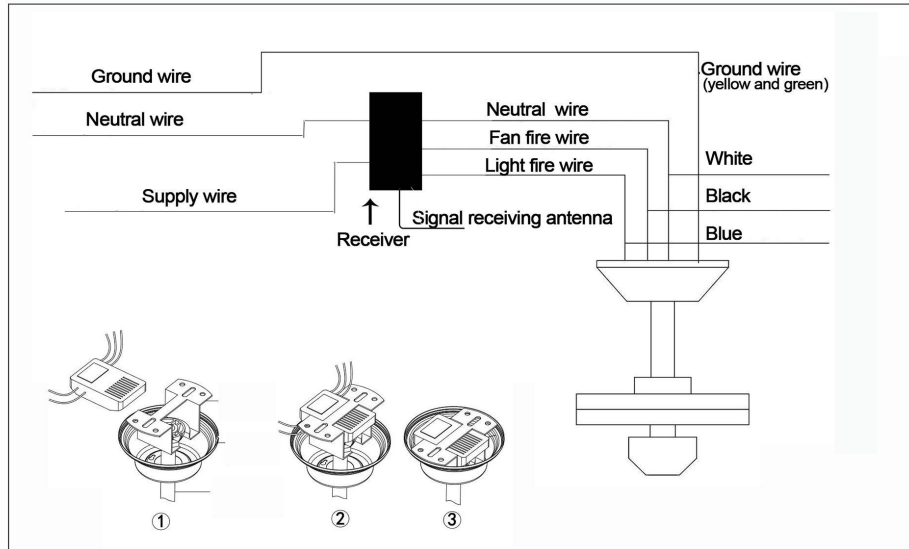


8.Fixed the canopy.

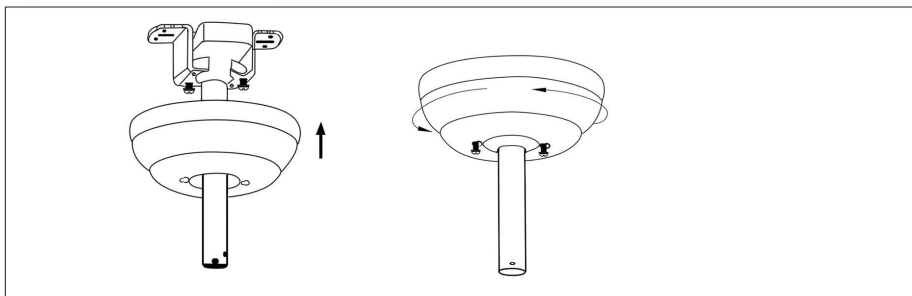

First loosen the two diagonal screws on the mounting bracket. Align the screws with the holes of the ceiling canopy and pass through the holes. Then rotate the ceiling canopy until it snaps, and tighten the screws.

DYNAMIC BLADE BALANCING KIT

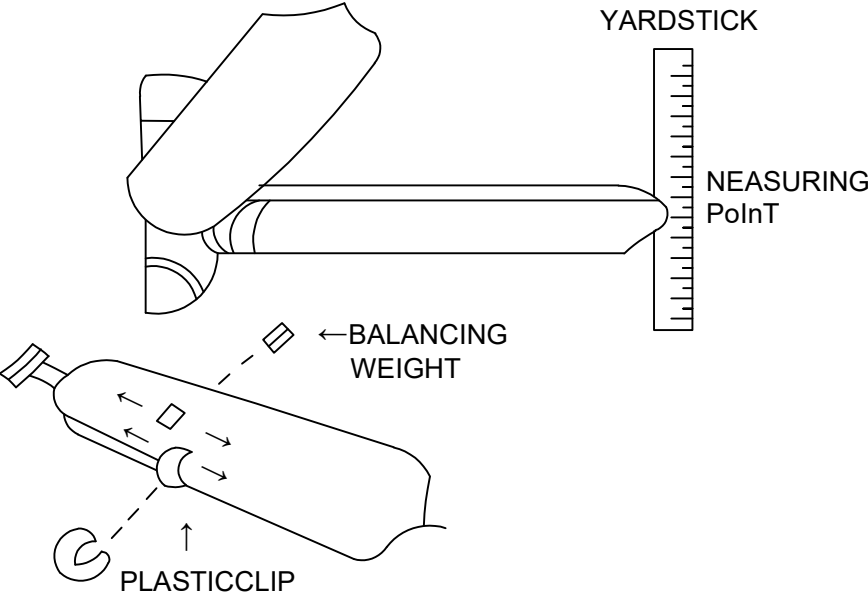

PREFACE

Your ceiling fan may sometimes have wobble problem when operate due to irregularity in blades or the blade holders. Also improper assembly in the mounting system may cause some additional problem, also bearings crooked. The following procedure to remedy such problem is strongly recommended by us from our past experience in handling the wobble problem:

DYNAMIC BLADE BALANCING KIT FOR CEILING FANS

1. Make certain that all blades are firmly screwed into the bladeholder
2. Make sure that all blades are firmly secured to the flywheel and check pitch of blade holders, all must be the same.

3. By looking up none of the blades are out of position bending the

4. By the simple be checked, and even with distance of the blades the blade is not up or down

If by following all a dynamic balancing Kit. Follow the procedure

* Turn the fan speed) setting

* Turn the fan on it, halfway the rear edge

* Turn the fan worsened. Turn blade and test then note the

* Move the clip improvement blade and observe the clip gives

* Next remove of the blade a was position weights.

Caution: Stay is no

more below check are bent so that action can be back into position

hold yardstick up against leading edge blade to the center to check the blade holder the other blade

the wobble be done by the below:

the speed control which creates

blade and plastic blade holder

see if the wobble again and mark at this position the most imbalance

blade which is inward and outward to find the position of improvement.

install a balancing line near the top of blade or razor

blades. If the wobble could result

certain that the blade is bent very gently

tracking can be vertically. Note the fully turn blades. If gently bent

is not solved if the balancing

is high at the wobble

balance clip blade tip or

move or up to another blades and

most in this re

up to the top here the clip rate the

any reason, us!