 



About installation

Various installation methods, installation can still be done if the wall is uneven

1 Drill and securely install




First, install the expansion bolts onto the corresponding positions on the pillar.

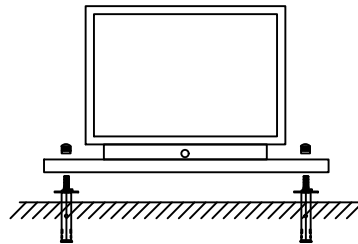


When installing, align the switch head in an easily accessible direction and then tighten the flower nut screw.

2 The glass is fixed in place using silicone sealant.

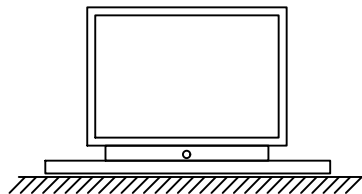

Place the lamp in the desired location.

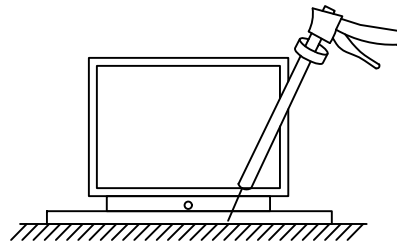


Apply silicone sealant to the base edge to secure it in place.

den light install

W ac
Pl
Ap

illing, align the switch direction and then tig
amp in the desired loc
ne sealant to the bas

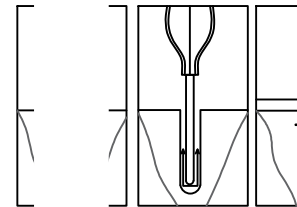

1. Op
2. Ta
(Pow
3. Ac
lamp
Mains


ckage and confirm th
lamp and test wheth
est whether the LED b
the installation video
ation where it needs t
require the installation

Thin
1. Pl
2. A
If yo
appl
Ens
sure
disc

te:
lamp in the appropriat
s glue to the edge of t
ss glue for installation
on the edge.
rculation between the
water that seeps in fr
you install it with scre

ns


crew
place.

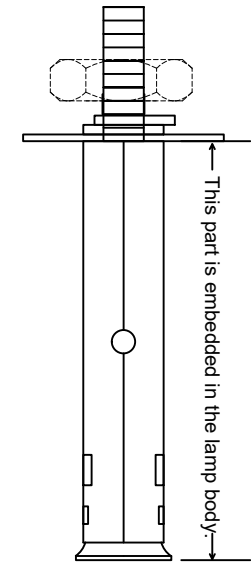

ps and accessories;
lamp is normal
installation);
er service, install the

f the edge without glue when


ody and the outside world. Make
ng-term rainy days can
t.

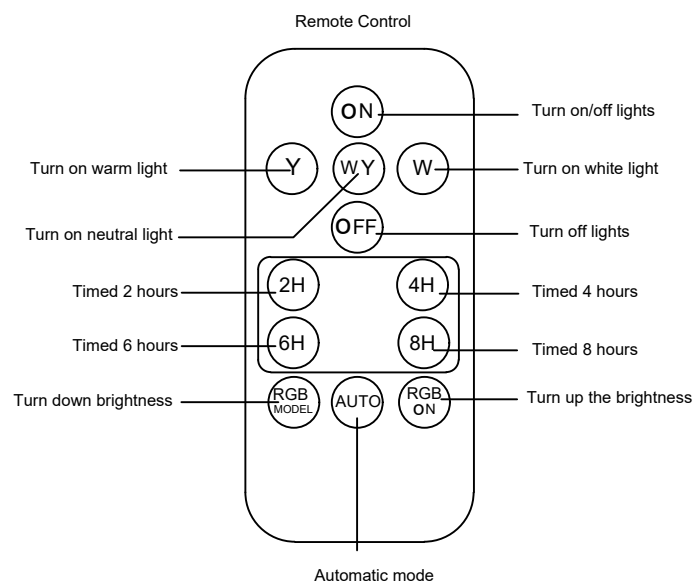


About installation

Various installation methods, installation can still be done if the wall is uneven

 ① Drill and securely install



First, install the expansion bolts onto the corresponding positions on the pillar.

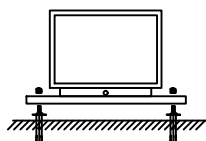

When installing, align the switch head in an easily accessible direction and then tighten the flower nut screw.

The glass is fixed in place using silicone sealant.



Place the lamp in the desired location.



Apply silicone sealant to the base edge to secure it in place.

1. Open the packaging accessories;
2. Take out the accessories that are normal (so panels before
3. According to the model, the lamp model needs to
4. For the first time, turn on the lamp, and

Things to note:

1. It is recommended after receiving the lamp due to over-discharge.
2. It is recommended to replenish the battery.
3. When installing, there is no obstacle above the lamp.
4. When installing, no light should be above the lamp. Light should be misjudged to light up. Light should be
5. It is recommended to use the lamp for one month to prevent the charging effect.
6. In the case of good, it is recommended to use the lamp for two months.
7. When you use the lamp, please refer to the user manual to use the remote control to restore the light.

nde

nd

and
els

talla
req
the
ou n
e A

that
ds t
of t
to in
ery
sol
ab
ctio
sola
p at
at it i

to cl
irt o
y an
nuou
ed t
the l
:
the l
ve i
l to t
ect;

talla

ntegr

r the
are it

rovid
catio
e of
he re
to set

del b
g un
ue to
mor
nsur
u ne
to a
in the
u nee
t light
durin

r pho
voltai
e ligh
s, the
mote
t will

t of t
ck th
ight -

ns

nd

lamps
solar

ervice,
ins

urn on
ode:

diately
e light
e;
r panel
ct;
that

on;
there is

es not

once a
fecting
;
not
ff the
r the

od,
inate it,
ights to