

Apex Flex Floor Lamp

- 1 Remove the mounted lamp body from the package
- 2 Put it in a dry place and use it with electricity

