


Estela Floor Lamp

THECARGOODS.COM

SUPPORT@THECARGOODS.COM

1:Open the packaging and place it on a flat surface

2:Plug in the power supply

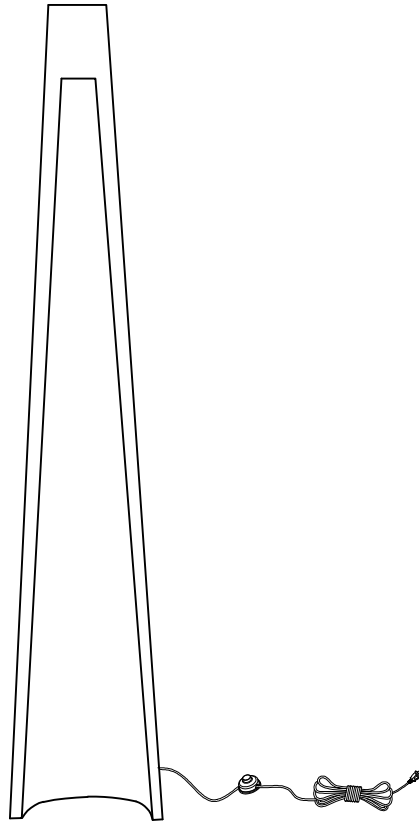

Installation instructions:

1. All L live wires of the light arm lead are connected to the main L live wire, and all N zero wires of the light arm lead are connected
2. Clamp with a wiring cap, tighten the connection and strengthen the insulation with a heat shrink tube.
3. Connect and lock the main ground wire to a separate grounding device on the lamp body.
4. All LED light sources are connected in series (excluding high-voltage LEDs).

6. Connecting incorrectly can lead to no lights, short circuits flickering, or burning.