


Adler THECARGOODS.COM

SUPPORT@THECARGOODS.COM

1: Connect the lamp wires to the reserved wires

2: Fix the lamp body to the ceiling with self tapping screws

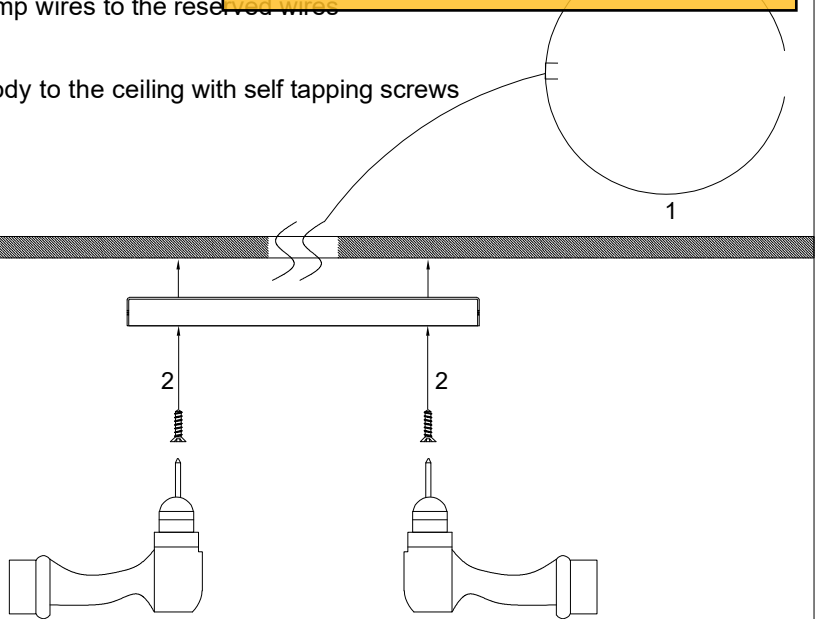

3: Install the lampshade

