


Art Deco Vintage Chandelier


THECARGOODS.COM
SUPPORT@THECARGOODS.COM




Email:

Product installation steps

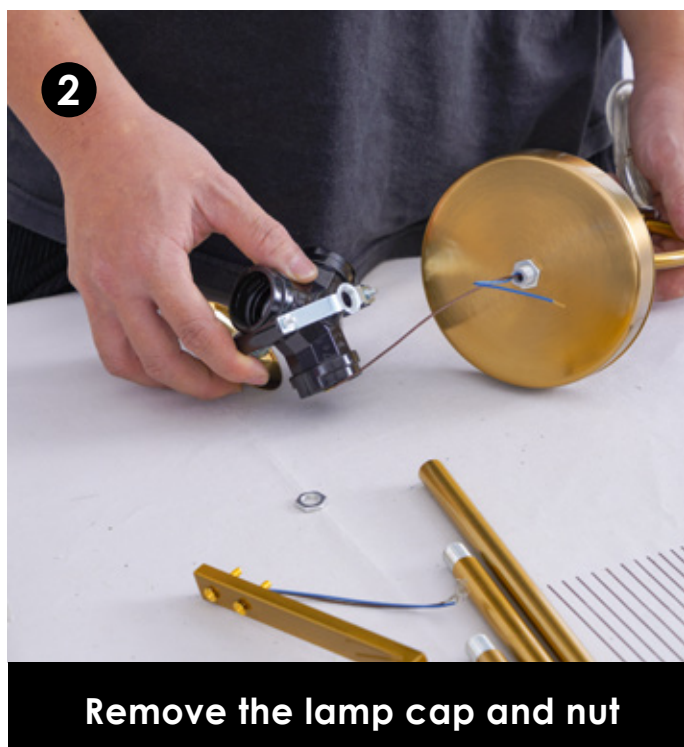


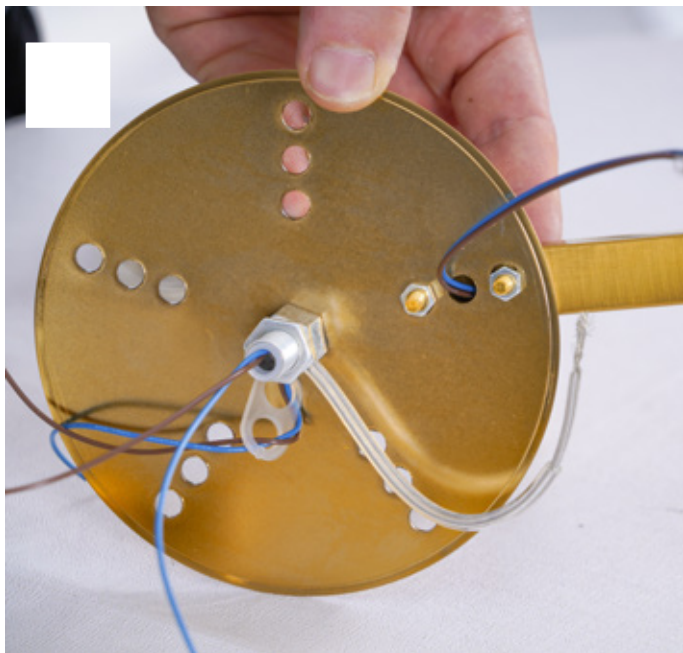


Fix the lamp arm with screws and pass the wire along the hole

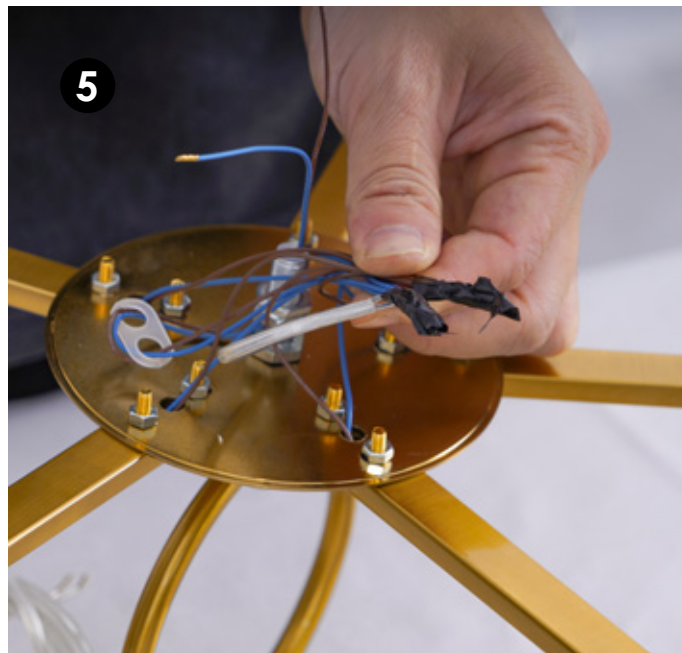

Tie wires of the same color together with wire caps or tape

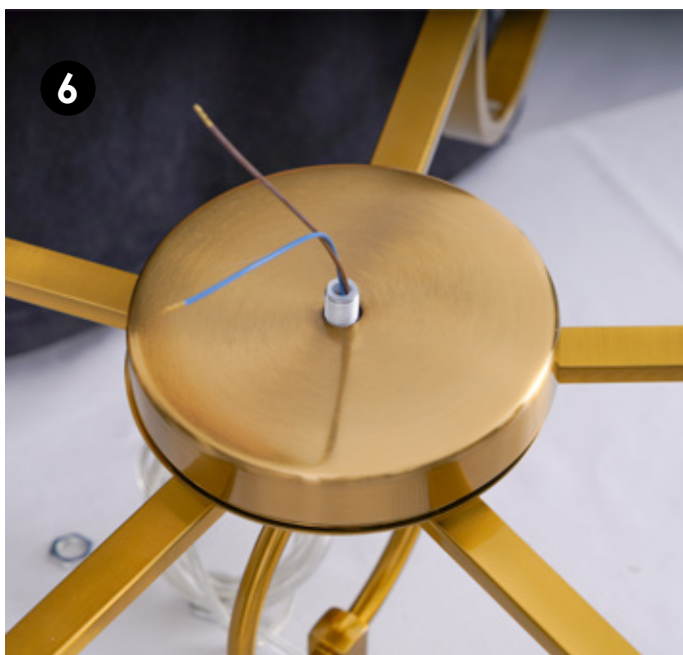

Fix the bottom cover of the lamp

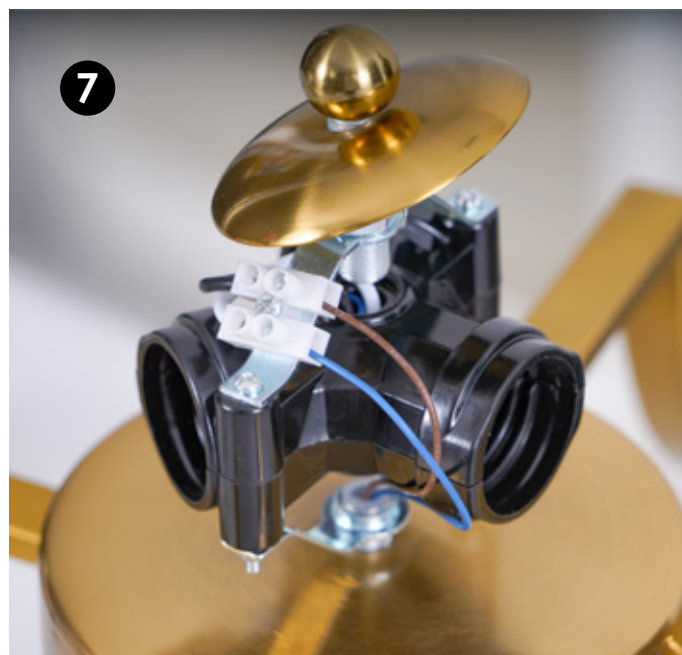

Rotate and fix the lamp head and base, and connect the wires with the connector



Install the light bulb



Fix the glass lampshade with nuts



Put on the glass lampshade



Installed and fixed to the ceiling

Email: