

Early American Chandelier


THECARGOODS.COM

SUPPORT@THECARGOODS.COM

1:Fix the hanging board to the ceiling

2:Connect the lamp wires to the reserved wires

3:Install glass pendant

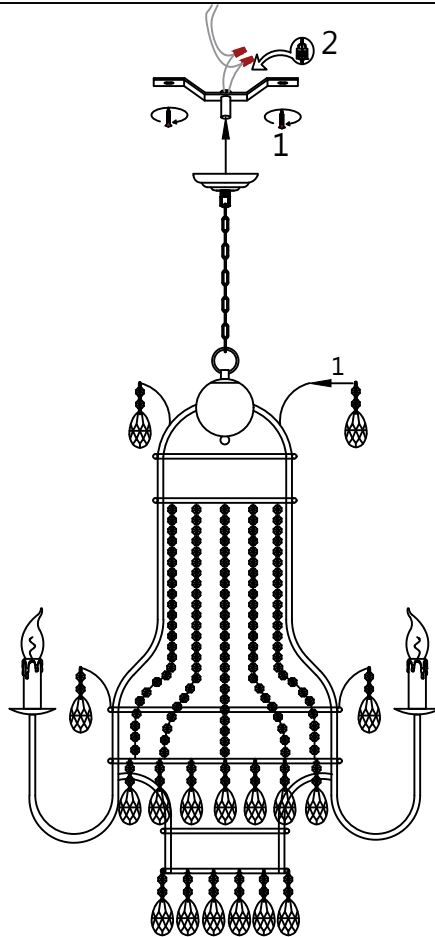

Installation instructions:

- 1.All L live wires of the light arm lead are connected to the main L live wire, and all N zero wires of the light arm lead are connected
2. Clamp with a wiring cap, tighten the connection and strengthen the insulation with a heat shrink tube.
3. Connect and lock the main ground wire to a separate grounding device on the lamp body.
4. All LED light sources are connected in series (excluding high-voltage LEDs).

6. Connecting incorrectly can lead to no lights, short circuits flickering, or burning.