

Westlife Sputnik Chandelier

THECARGOODS.COM

SUPPORT@THECARGOODS.COM


1:Assembly of lamp body

2:Fix the hanging board to the ceiling

3:Connect the lamp wires to the reserved wires

4:Fix the ceiling tray and hanging board from the side

5:Install glass lampshade

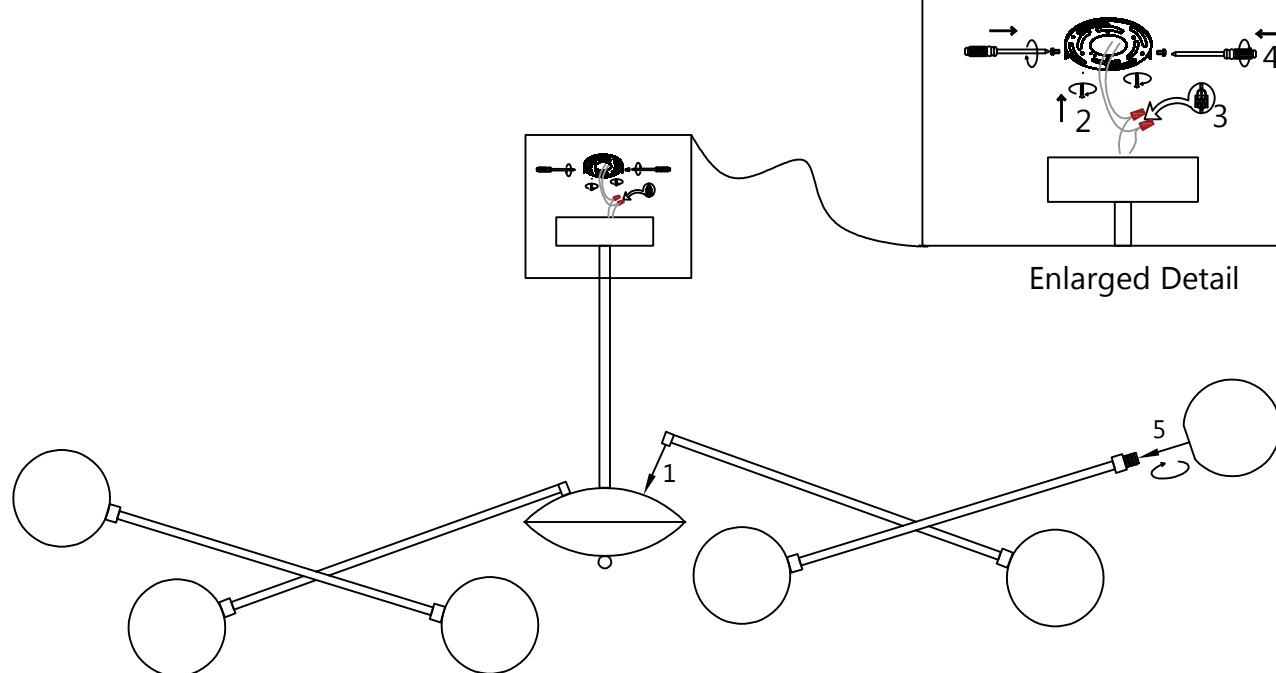

Installation instructions:

1. All L live wires of the light arm lead are connected to the main L live wire, and all N zero wires of the light arm lead are connected
2. Clamp with a wiring cap, tighten the connection and strengthen the insulation with a heat shrink tube.
3. Connect and lock the main ground wire to a separate grounding device on the lamp body.
4. All LED light sources are connected in series (excluding high-voltage LEDs).

6. Connecting incorrectly can lead to no lights, short circuits flickering, or burning.